


Wand Control Motorized Custom Shades

Part # MEINC306

Programming and Operating Instructions


Wand Control shades are powered by a rechargeable lithium-ion battery contained and concealed within the roller tube

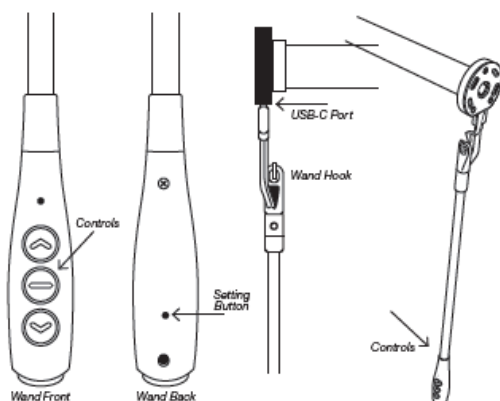

CONNECT THE WAND TO THE MOTOR HEAD

Slide the Wand onto the hook attached to the motor head such that the controls on the handle of the wand face into the room.

Attach the mini USB connector to the USB port on the motor head as illustrated.

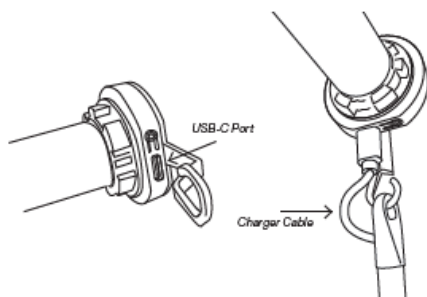

PROGRAMMING AND OPERATION OF RADIO TECHNOLOGY MOTORS

IMPORTANT:

The Upper & Lower limit positions (full UP & DOWN positions) have been pre-set at the factory – therefore, it is not necessary to perform Step 1 below – however, we recommend that you read this to familiarize yourself with the basics of programming the motor to fully understand the function of your motorized shade.

Note: the battery in the motor has been partially charged at the factory. Fully charge the battery at your convenience following the guidelines in these instructions.

Setting UP and DOWN Limit Positions:

Note: Upper and lower limit positions have been pre-set at the factory - programming information for this Step is provided as background information only.

Set the UP position: Press the SETTING button on the back of the wand handle

– the motor will oscillate (a quick back and forth movement of the shade) – the motor is now in program mode. Move the shade to the desired upper limit by pressing the UP or DOWN arrows/buttons on the wand handle. Press the SETTING button again – the motor will oscillate and the upper limit is now set. PROGRAM button again – the motor will oscillate and the intermediate STOP position is now set.

Set the DOWN position: Move the shade to the desired lower limit by pressing the UP or DOWN arrows/buttons on the wand handle. Press the SETTING button on the back of the wand handle – the motor will oscillate – this puts the motor in program mode. Press the SETTING button again – the motor will oscillate and the lower limit is now set.

Setting Intermediate Positions

Up to (4) intermediate limit positions can be set.

Move the shade to any desired intermediate STOP position that is least 6 inches away from any previously set limits – press the SETTING button on the back of the wand handle – the motor will oscillate and is now in program mode.

Now press the SETTING button again – the motor will oscillate and the intermediate limit position is now set.

Repeat this process to set additional intermediate Limit/STOP positions.

Limit Position Fine-Tuning

Move the shade to the limit position to be adjusted. Press the SETTING button on the rear of the wand handle – the motor will oscillate and is now in program mode. Move the shade to the desired 'new' position – press the SETTING button – the motor will oscillate and the revised limit position is now set.

Deleting a Limit Position

Note that the upper limit can only be deleted by a factory reset which deletes all limits (see below).

Move the shade to the limit position that you wish to delete. Press and hold the SETTING button for approximately 7 seconds – the motor will oscillate once initially and a second time after about 7 seconds – the limit position is now deleted.

Delete All Limits / Factory Reset

Press and hold the programming button on the motor head for approximately 7 seconds – the motor will oscillate twice and the motor is now reset. The motor will have to be reprogrammed for continued use.

Changing Motor Direction

Motor direction is pre-set at the factory. So, under normal circumstances there should be no need to change/reverse motor direction. However, polarity can be reversed as follows: Press the programming button on the motor head - the motor will oscillate. Then press and hold the DOWN button on the wand handle – the motor will oscillate again – motor direction is now reversed.

Using the Wand Controls / Operating the Shade

Press the UP/DOWN button once and the shade will move to the next pre-set limit position.

Press the UP/DOWN button twice within a second (i.e. twice rapidly) and the shade will move to the UP or DOWN limit position without stopping at any intermediate position.

When the up position has been reached, the UP button becomes nonfunctional, and when the down position has been reached the DOWN button becomes non-functional.

Charging the Battery

[AC Charger and cable included with every shade]

Connect the AC Charger to the charging port on the bottom of the wand handle using the cable provided – charge for 8 hours.

Note: Each battery/motor should be charged at least once every 6 months. If the cable or power connector is damaged, do not use it – contact customer service for a replacement.

Important Information about your battery powered product: Rechargeable batteries should be recycled, not disposed of with common household trash. When/if you replace your shade, please recycle in accordance with local environmental regulations.

