



Simple Touch® 15-Channel Remote Programming Instruction


Step 1. 15-Channel Remote Frequency Connection

 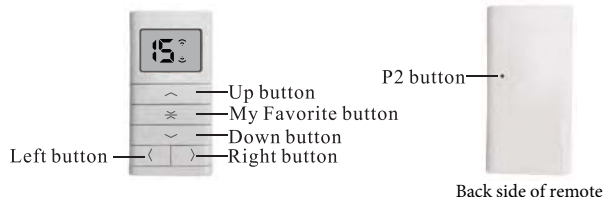


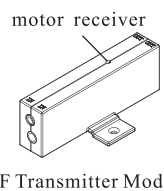


- Use **Left** or **Right** button to select channel from 1 to 15.
- Press **motor receiver** with pin or paper clip for 2 seconds. Wait for motor to "jog".
- Click **P2** button (on back of remote) with pin or paper clip, and then wait for motor to "jog".
- Click **P2** again and wait for another "jog".
- Click **Up** button.
- RF connection completed.

 
Step 2. Setup Top Limit




- Press **Up** button to move shade to top limited location.
- Press **Up** and **My Favorite** buttons at the same time for 5 seconds.
- You will hear 3 short "B". 
- Top limit setup completed.

 
 
Step 3. Setup Bottom Limit




- Press **Down** button to move shade to bottom limited location.
- Press **Down** and **My Favorite** buttons at the same time for 5 seconds.
- You will hear 3 short "B". 
- Bottom limit setup completed.

Step 4. Setup My Favorite Position




- Operate the shade to your favorite position.
- Press **My Favorite** button for 5 seconds. Wait for a short "B". 
- Then press **My Favorite** button again for 3 seconds. Wait for 3 short "B". 
- My Favorite position setup completed.

* Hide unused channels on remote

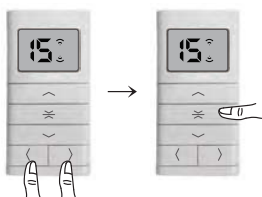


- Press and hold **Left** and **Right** buttons at the same time, and then "C" will show on the screen. Wait until "15" shown on the screen, then release buttons.
- Press **Left** or **Right** button to select how many channels you want to show on the screen. For example, if you only have 10 motorized shades connected to this remote, please select "10".
- Press and hold **My Favorite** button (a small "0" will appear first) until channel number shown on the screen again.
- Setting completed.

 
* Unhide channels on remote

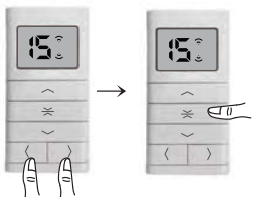

- Press and hold **Left** and **Right** buttons at the same time, and then "C" will show on the screen. Wait until "15" shown on the screen, then release buttons.
- Press **My Favorite** button (a small "0" will appear on screen).
- Setting completed.

* Reset/ Re-programing



- Press **Up**, **My Favorite**, and **Down** buttons at the same time. Don't release until you hear a long "B". 
- Start programming from Step 1 to Step 4 above.

Simple Touch® 15-Channel Remote Operation Guide

- ❖ Extend and Retract the Shade Before you setup My Favorite Position:
 - Press the **DOWN** button to Extend the Shade.
 - Press the **UP** button to Retract the Shade.
 - Press **My Favorite** button to Stop.

- ❖ Extend and Retract the Shade After you setup My Favorite Position:
 - Press the **DOWN** button for 1.5 seconds to continuing Extend the Shade.
 - Press the **UP** button for 1.5 seconds to continuing Retract the Shade.
 - Press any button to stop

- ❖ Operate your shade to My Favorite position:
 - After you setup My Favorite position, press **UP** button to retract shade to top limited position.
 - Press **My Favorite** button for 2 seconds to operate shade to your favorite position.

- ❖ Press **LEFT** < or **RIGHT** > button to select the desired channel (Channel 1 - Channel 15). To control 15 motors/ motorized shades synchronously, move to channel "0" for group control.

- ❖ Add a duplicated remote control:
 - Click **P2** once on the existing remote, and wait for shade to "jog". Click **P2** again and wait for another "jog".
 - Click **P2** once on the new adding remote, and wait for shade to "jog".

- ❖ Disconnect a duplicated remote to the original existing remote:
 - Click **P2** once on the remote you want to continue use, and wait for shade to "jog". Click **P2** again and wait for another "jog".
 - Click **P2** button once on the remote you want to remove.

- ❖ Remove **All** connected remotes:
 - Click **P2** button once on one of remotes, and wait for shade to "jog".
 - Click **My Favorite** button, and then wait shade to "jog".
 - Click **P2** button on the same remote again, and then shade will jog.
 - All remotes will be disconnected.

Simple Touch® 15-Channel Remote Q&A

- Q: Can one shade be programed on multiple channels?
A: No, one shade can be only programed on one channel
- Q: Can multiple shades be programed on ONE channel?
A: Yes, only on channel “0”. Channel “0” is designed to control multiple shades that connect to this remote. The maximum controlled quantity is 15 shades.
- Q: Can this 15-channel remote connect to old Simple Touch motor?
A: Yes, programing needs to follow by old Simple Touch motor instruction, but no clock and alarm setting on 15-channel remote.
- Q: Can 1- & 5- channel remotes connect to new motor?
A: Yes, just followed by new motor programing instruction. Both clock and alarm work on old remote.
- Q: What is the distant limit for new 15-channel remote?
A: Up to 164 ft.
- Q: Can I control shades from other room?
A: Not recommend.
- Q: How do I reset size limit?
A: Erase frequency setting and then reprogram it.
- Q: How to hide unused channels?
A: Press **Left** and **Right** buttons for 5 seconds, select the channel# you need, and then press “**My Favorite**” button. Please see details on programing guide.
- Q: How to unhide unused channels?
A: Press **Left** and **Right** buttons for 5 seconds, and then press “**My Favorite**” button. Please see details on programing guide.
- Q: How long is the warranty of 15-channel remote and motor?
A: 1 year manufacture warranty

Simple Touch® 15-Channel Remote Trouble Shooting

Trouble Shooting

- Remote doesn't work.
 - Please check batteries on both remote and shade first
 - Make sure all 4 cord connectors are plug into RF box **completely**.
- Remote can only control motorized shade to one direction
 - Please make sure all 4 cord connectors are plug into RF box **completely**.
- When remote is unable to connect to shade after consumer received shades?
 - Make sure all cords are plugged in **completely**.
 - Erase frequency setting.
 - Program motorized shade from step1 to step4 on programing instruction.

Please call customer service at 1-800-879-9512 for any questions.