

CARE INSTRUCTIONS

Dust your sliding panels with a soft cloth occasionally or vacuum lightly with an upholstery attachment. Bamboo panels can be gently wiped with a damp cloth to remove stains, but avoid excessive contact with moisture. Edge bindings can be gently cleaned with a damp cloth.

REPLACEMENT PARTS:

In the event that replacement parts are ever needed, please **call 1-888-633-7840**. Please provide your original order number and a description of the part needed.

ONE YEAR LIMITED WARRANTY:

What is covered by this warranty and for how long:

For a period of one (1) year from the date of purchase, all products are warranted against defects in materials and workmanship provided that the product is installed according to the product instructions. We reserve the right to determine if your piece warrants a repair or partial replacement of any parts or in the unlikely event the entire piece is defective, we will replace this window covering with a new window covering of equal or superior value. This shall be your sole remedy under this warranty.

Who is covered by this warranty:

This warranty applies to the original customer with proof of purchase in a residential application within the United States.

What is not covered in this warranty:

This warranty does not cover removal or installation or reinstallation of any window covering. This warranty does not cover damage or defects caused by or resulting from improper maintenance, neglect or improper use, abuse, misuse, neglect, accidents, Acts of God, alteration, commercial use, installation, removal or reinstallation or exposure to excessive moisture.

Your rights under State Law:

This warranty gives you the specific legal rights. You may also have other rights which may vary from state to state. Blinds.com will not be liable for **INCIDENTAL OR CONSEQUENTIAL DAMAGES** or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

How to obtain warrant service:

To obtain warranty service please contact Customer Service at **1-888-633-7840** or via e-mail at **customerservice@blindschalet.com**.

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER OBLIGATIONS, LIABILITIES, OR WARRANTIES.



Woven Wood Sliding Panels Installation Instructions

Thank you for purchasing your Blinds Chalet custom woven wood sliding panels. With proper installation your shade should look beautiful and provide years of service. Please check all parts and read these instructions before starting installation.

Please keep the packaging until you have installed your shade and are satisfied with it.

TOOLS THAT MAY BE REQUIRED:


Pencil, Tape Measure, Screw Driver, Step Stool, Level, and Drill

NOTE: For wallboard or plaster use anchors designed for hollow walls (not included). For concrete, stone or brick, use a masonry drill bit and anchors designed for masonry (not included).

If you ordered a sliding panel wider than 94 inches, the track will have been supplied to you in two pieces, with a splicing piece to join the two halves. The splicing piece will already have been installed in one half of the track **[figure 1]**. Simply slide the other half of the track onto the exposed end of the splicing piece until the two halves fit snugly together **[figure 2]**. The track can then be installed.



 [figure 1]



[figure 2]

STEP 1: INSTALL BRACKETS

CEILING OR TOP MOUNT

Depending on the size of track you received, you will have received a small or a large swivel bracket. [figures 3 & 4]

For a ceiling or top mount, you will mount this swivel bracket directly to the mounting surface.

1. Measure 4 inches in from each end of the window and ensure you have the following clearance from the window or from any protruding window hardware:


Small bracket: 1 1/4" from the hole of the bracket.

Large bracket: 2" from the hole of the bracket.


2. Make a pencil mark through the hole in the center of the bracket.
3. Space any additional brackets evenly between the two end brackets.
4. Drill holes through the pencil marks and using the correct anchors for your mounting surface, attach the brackets to the mounting surface. The arm of the bracket should face into the room and to the right as in the picture above.
5. When all the brackets are installed, place the track against the bracket and rotate the swivel by pushing the front arm back and to the left, until only the front lip of the bracket is visible. Check that the bracket has fully secured the headrail. Repeat with all brackets. [figure 5]



 [figure 3]
SMALL BRACKET

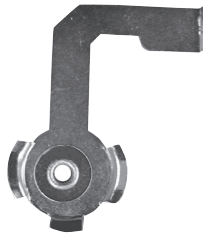

[figure 4]
LARGE BRACKET

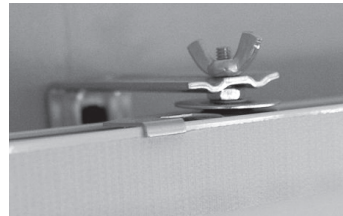 

[figure 5]

WALL OR FACE MOUNT

For this kind of installation you will use an L bracket to attach the swivel bracket to the wall.

1. Attach the swivel brackets to the L bracket using the screw and nut provided. [figure 6]
2. Mark with a pencil the desired height of the L bracket, based on the length of shade you ordered. Then measure in 4" from the ends of the headrail. Secure the L brackets to the wall with the screws provided and using the correct anchors for your mounting surface.
3. Space any additional L brackets evenly between the two end brackets. Use a level to make sure all brackets are level. Uneven brackets may stop the brackets engaging properly with the headrail.



[figure 6]

WALL OR FACE MOUNT continued

4. Ensure the swivel brackets are in the correct, open position (see item 4 in Ceiling Mount).
5. Place track against the brackets and rotate the swivel to the closed position (see item 5 in Ceiling Mount). Check that the headrail is securely held by all brackets.

STEP 2: ATTACH PANELS (AND VALANCE)

Secure the panels to the hangers with the velcro provided. Take care to position the panels so that the velcro engages fully and make sure the panel is level. Repeat with all panels. [figure 7]

If a valance has been ordered, attach the valance and any returns to the front and the sides of the track, using the velcro provided.



[figure 7]

STEP 3: ATTACH THE CORD TENSIONER

Loose and dangling cords can provide a strangulation hazard for young children and pets. Your shade has been provided with a cord tensioner, which must be secured to the wall, to allow safe operation of the shade.

Locate the tensioner as close to the shade as possible and mount the tensioner to the wall using the screws provided and making sure that the cord is under tension, but still able to move freely.

WARNING:

Young children can strangle in cord and bead chain loops. They can also wrap cords around their necks and strangle.

- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens and other furniture away from cords and bead chains. Children can climb furniture to get to cords.
- Attach a cord guide to the wall. This can prevent children from pulling cords and bead chains around their necks.

