

Atlas Roman Shade Installation Instructions

Tools you will need:

Measuring Tape
1/4" Magnetic Nut Driver
Cordless Drill
Steamer
Ladder/Step Stool



Hardware you will receive:

Installation Brackets
Mounting Screws
Wing Nuts
3/8" Spacer Block
Cord




Installation

Hold the installation bracket in place, set bracket to proper depth in window (approximately 1/2")
Install brackets. Insert the screws into the 1/4" magnetic nut driver and mount the brackets to the top of the window sill or wall.



- Secure returns on shade, using the double sided tape
- Remove wing nuts from installation brackets provided. Fasten loose fabric to both ends of the headrail.

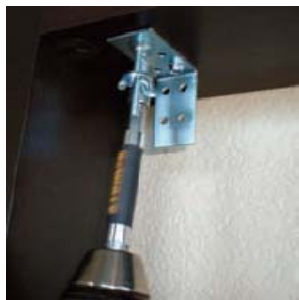

Install shade by holding headrail up to window frame bolts should exit through the slots provided on each end of the headrail fasten with wing nuts.



Operating your new shade

The lift cord is used to raise and lower the shade. Pull the cord away from window to lift and lock and the blind in position. Pull toward the center to release from the locked position.

When finished, steam fabric or apply a crease away spray to release wrinkles from fabric that may appear as a result in packaging.



Care and cleaning of your cell shades

Roman shades are made of anti-static, dust and stain resistant fabrics. For most fabrics, the following options are available if your shade needs cleaning.

Dusting: Light dusting with a feather duster is all the cleaning that is needed in most circumstances.

Vacuuming: Use a hand held vacuum on lower setting for more thorough dust removal.

Spot Removal: Dampen a clean cloth with a warm water and mild soap solution. Dab soiled area with cloth, do not rub the fabric. Allow to dry completely in lowered position.