

soLar-bar


In Home Custom Cutting Installation Instructions

To properly install your soLar-bar product, you must have a minimum of 3/4 inch sized, flat & clean surface.

Tools you will need: tape measure, pencil or marker, heavy scissors/side cutters.



A) Lower the blind to rest on the window sill.

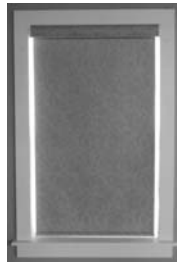

B) Before removing the liner from the taped side of your soLar-bar, determine if you will be mounting the product in front or behind the material. The difference is aesthetic or if the light is more effectively blocked with the product in front or behind the blind.



C) Using a tape measure, start measuring from the bottom of the window sill where the blind is resting and going up to the closest point of the blind mechanism or valance returns. Make sure the soLar-bar is as close to the edges of the blind as possible without allowing the blind to rub against the soLar-bar. (If the blind is fitted with a control mechanism, ensure the soLar-bar does not interfere with the the blind's opening and closing.)



D) Using a marker or pencil, mark a piece of soLar-bar with your measurement and cut to height using a sharp pair of heavy scissors or side cutters. Repeat with the second piece.



E) Once mounting location is determined, remove the liner from the taped surface of the soLar-bar and attach to the window frame.



This product may not be applicable for all window frame openings or window blinds.